Custom Notor driven 2, 3 port ball valve

MXB/MXG

Motor driven 2, 3 port ball valve

For water, hot water, air, oil, corrosive fluids, steam

Overview

Water hammering is eliminated with CKD original ball opening/closing structure.

This valve is suitable for water and hot water controls, and oil and steam applications. Even with its small size, the flow rate is large and the pressure loss is small.

The outstanding sealing properties and durability enable use in a variety of applications.

Features

High quality seal

A back-up O ring ensures a high quality seal.

No burn damage in motorlocked state

Impedance and thermal protections ensure that the motor does not burn even if the ball locks. Always observe the cycle rate.

Forward/reverse rotation operation

(except for the MH 4 Series)

No limits to pressurization direction

(except for 3-way valves)

Signal detection and manual override are provided.

Class IPX3 "rainproof" actuator protection

For standard and options T and Note that the MH_G^B4 and MHBP Series are excluded.

Motor driven proportional control ball valves are also available.



Series variation		552
▲ Safety precautions		554
Wiring diagram		557
Standard type		
2 port valve	MXB1/MXB1F	558
3 port valve	MXG1	562
High corrosion resistance		
2 port valve	MXB1-C	566
Oil-free specifications		
2 port valve	MXB1-N/MXB1D-N	582
3 port valve	MXG1-N/MXG1D-N	580
For steam		
2 port valve	MSB1/MSB1F	590
With relay		
2 port valve	MXB1D/MXB1DF	570
3 port valve	MXG1D	574
High corrosion resistance / wi	th relay	
● 2 port valve	MXB1D-C	578
For steam / with relay		
2 port valve	MSB1D/MSB1DF	594
Proportional control		
2 port valve	MXBC	598
3 port valve	MXGC	598
Motor valve type temperature control system	MHBP	608
Miniature type		
2 port valve	MHB4	602
3 port valve	MHG4	602
Electronic Catalog file list		612

Always read the precautions in the Introduction and page 554 before starting use.

HNB/G HSR/G

FAB/G

FGB/G

FWB/G

FHB

FLB

AB AG

AD APK/ ADK

For dry air Explosion proof HVB/

CAR/ SVB NP/NAP/ NVP

HVL

CHR/G

MXB/G Other G.P. systems

PD/FAD/ P.J CVE/ CVSE

CPE/ CPD Medica analysis

order

Series variation

Motor driven 2, 3 port ball valve

Applications/purposes	Model		Bore shape	
	Standard	MXB1	Standard bore	
General control	type	MXB1F	Full bore	
		MXG1	Standard bore	
	Miniature type	MHB3		
		MHG3		
Compact type		MHB4	Reduced bore	
		MHG4		
Parallel operation with other	With relay	MXB1D	Standard bore	
valves is available Valve open/close at ON/OFF		MXB1DF	Full bore	
contact	€ 100 mm	MXG1D	Standard bore	
	Oil-free specifications	MXB1-N		
		MXG1-N	Oten dend bene	
For pure water and cleaning		MXB1D-N	Standard bore	
		MXG1D-N		
	For steam	MSB1	Standard bore	
For steam and hot water		MSB1F	Full bore	
For Steam and not water		MSB1D	Standard bore	
		MSB1DF	Full bore	
	Proportional control type	MXBC		
Accurate flow control		MXGC	Standard bore	
	4	МНВР		
Responding to service interruption	Self reset type	MHBR	Standard bore	
Acid water/alkaline water control	For ionized water	MHG4-20X913	Reduced bore	



Safety precautions

Always read this section before starting use.

Motor driven ball valve

MXB1/MXB1F/MXG1/MXB1D/MXB1DF/MXG1D/MSB1/ MSB1F/MSB1D/MSB1DF/MHB4/MHG4/MHBP

Design & Selection



A CAUTION

Fluid viscosity

Generally, the valve can be used with a fluid viscosity of up to 500 mm²/s. However, the properties may differ according to the fluid type, so consult with CKD.

2 Fluid properties

Iron rust and dirt, etc., in the fluid can cause operation faults or leaks and reduce product performance.


Installation, Piping & Wiring




A CAUTION

Installation

- (1) Always hold the body when handling or installing the product. Do not pull the lead wires or drop the product.
- (2) Install the valve within the range between vertical position with actuator facing upward and horizontal position.
- (3) Avoid outdoor installation.





<For horizontal piping>

<For vertical piping>

2 Piping

- (1) Fix the product when tightening or reinstalling the piping. When piping to the body side, fix the body, and when piping to the cap side, fix the cap.
- (2) Fix and support the pipes so that the weight and vibration of the pipes are not directly applied on the valves.
- (3) The pressurization direction, limited for the 3-way valve, must be observed.
- (4) When using heat insulating material, do not cover the actuator

3 Wiring

- (1) Connection is shown in the wiring diagram in page 557 or is attached to the bonnet. Follow the wiring diagram.
- (2) When using the DC specifications, use a capacitance nower supply
 - An all wave or half wave rectified bridge is affected by ripples, so always use a stabilized power supply.
- (3) Avoid using a changeover switch with red and black lead wires as the signals could be input simultaneously.
- (4) Parallel operation of motor driven ball valves (excluding MXB1D/MXB1DF/MXG1D/MSB1D/MSB1DF) Do not operate more than one ball valve in parallel using the same contact. Otherwise, operation faults will occur.



In parallel operation, insert a separate contact for each ball valve.



(5) Parallel operation with other valves, etc. (excluding MXB1D/MXB1DF/MXG1D/MSB1D/MSB1DF) Do not operate in parallel with other products having different resistance, such as a solenoid valve or contact protection element, using the same contact. Otherwise, operation faults will occur.



In parallel operation, insert a contact between the ball valve and solenoid valve, etc.



- (6) When not using the signal detection wire, cut the exposed core of the yellow and green wires, and insulate the wire
- (7) When using the signal detection wire with a large capacity load or extremely small load, etc., use within the specifications of the micro switch.

Model no.	Maker name, type
MXB1/MXB1F/MXG1/MXB1D/MXB1DF/ MXG1D/MSB1/MSB1F/MSB1D/MSB1DF	OMRON SS-5
MHB4/MHG4	Matsushita Electric Works AH1680
MHBP	OMRON SS-5GL

- (8) When using in a place where water splashes on the valve, take measures to protect the lead wire connection section.
- (9) When wiring a terminal box with indicator light, do not remove the cover with force.
 - Otherwise, the crimp terminals inside could bend, and indicator lighting faults or insulation faults could occur.

HNR/G

FHB

When Usina



WARNING

Cycle rate

Always observe the cycle rate.

Otherwise, the thermal protector could operate and stop the valve. In the locked state, a continuously energized state could be created placing a load on the gears and coils. Turn the power off immediately, and eliminate the problem. Continuing use could result in operation faults or reduce the durability.

A CAUTION

1 Signal switchover

Switch the valve signal so that the next signal is input after the valve operation ends.

If operation is stopped or if the signal is switched midway. operation faults could occur and the service life could be shortened

2 Manual operation


This applies to the MXB1, MXB1F, MXB1D, MXB1DF, MSB1, MSB1F, MSB1D and MSB1DF. For the large bore sizes (standard bore: Rc1 1/4 to Rc2, full bore: Rc1 to Rc1 1/2), this applies to valves with manual override "M".

<Manual operation method>

- · For the small bore sizes (standard bore: Rc3/8 to Rc1, full bore: Rc1/2 to Rc3/4), insert a cross-recessed screwdriver, etc., in the open/close indication hole on the intermediate bush of the motor valve, and slowly rotate it.
- · For the large bore sizes (standard bore: Rc1 1/4 to Rc2, full bore: Rc1 to Rc1 1/2) with manual override "M", insert a cross-recessed screwdriver, etc., under the connection key at the intermediate bush, and slowly rotate it with the clutch disengaged.
- · Rotate for about 20 seconds between the closed and open positions and vice versa.
- · For both the large and small bore sizes, rotating in the counterclockwise direction looking at the valve from above will lead to "opening", and rotating in the clockwise direction will lead to "closing".

<Pre><Precautions for manual operation>

- · Always turn the power OFF before starting.
- · Do not apply sudden force when rotating the screwdriver as the gears could be damaged.
- · For the large bore sizes (standard bore: Rc1 1/4 to Rc2, full bore: Rc1 to Rc1 1/2) with manual override "M", always return the clutch after manual operation, and make sure that the clutch is accurately connected before starting operation.
- · Manual operations must be performed only in emergencies.

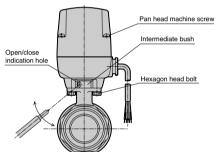

Maintenance

🏔 WARNING

Never remove the bonnet.

Touching the electric parts inside could lead to electric shocks.

2 Do not disassemble the product.

If a fault occurs, do not disassemble the product. Contact your nearest dealer or CKD Sales Office. Investigation of the cause is no longer possible if the product is disassembled.



Safety precautions Always read this section before starting use.

Motor driven proportional control ball valve (MXBC/MXGC)

Design & Selection

A CAUTION

1 Power supply

Select the power supply allowing for a sufficient capacity (50 W class is recommended). Do not use a full wave rectified bridge as it is affected by ripples or zero voltage, etc. Instead. use a stabilized power supply.

2 Control methods

Use a controller or thermostat having a PID function, and keep the energizing frequency at 10% or less. When using for ON/OFF control or control with a high energizing frequency, the service life will be shortened, and the thermal protector could be activated due to motor heating. This will temporarily shut off the motor power and prevent correct operations. Lowering the energizing frequency will allow the service life of the entire device to be lengthened, so carefully consider the control methods and energizing frequency.

3 Service life


The product's service life will differ greatly according to the operation. However, as a guide, the life is approx. 12 to 18 months when used with an energizing frequency of 10% for eight hours a day.

4 Input signal and Cv flow factor

The ball valve opening degree position and input signal are initially adjusted as follow.

Input signal	Ball valve open/close position
0 mA	Fully closed position
20 mA	Fully opened position

As shown below, the Cv flow factor variation in one step will increase in the areas where the Cv flow factor is small or near the maximum flow rate. Thus, avoid using in these ranges, and obtain stability by controlling so that the expression maximum Cv flow factor x 1/2 = required flow rate is satisfied.



The angle at which the ball valve starts to open and the Cv flow factor in respect to the input signal will differ according to the product.

When using outdoor piping, use resin piping to prevent damage from lightning. A stepping motor is used, so noise will be generated at the power line. Thus, use noise filters on devices susceptible to noise, such as computers connected to the common power supply.

6 Actual control

- (1) Temperature control: When controlling the heating or cooling temperature, attention must be paid to the balance of the applied and lost heat. If the heat is not balanced, the control will not stabilize, and vibration could occur causing a large error. Design the device with balance in mind, considering the required fluid flow rate and temperature in respect to the target temperature.
- (2) Constant flow rate control: The resolution of the ball valve is 2.5% or less. Thus, it may not be possible to attain the required flow rate if more precise resolution is required. When using at high pressures, note that this resolution limit is particularly apparent.

7 Fluid viscosity

Generally, the valve can be used with a fluid viscosity of up to 500 mm²/s. However, the properties may differ according to the fluid type, so consult with CKD.

<<Miscellaneous>> Refer to page 554 for the precautions regarding the motor driven ball valve.

Installation, Piping & Wiring

A WARNING

Wiring

Refer to page 557.

<<Miscellaneous>> Refer to page 554 for the precautions regarding the motor driven ball valve.

When Using



<<Miscellaneous>> Refer to page 555 for the precautions regarding the motor driven ball valve.

Maintenance




<<Miscellaneous>> Refer to page 555 for the precautions regarding the motor driven ball valve.




MX&1/MXB1F/MSB1/MSB1F wiring diagram

Standard type



Option: T (3-conductor cable)



DC power supply White OLS AC Black (2) Close Supply range * L and R cannot be installed together.

Option: L, R (with indicator light)

Opening operation (1): White - red After opening, the micro switch (OLS) functions and stops the motor.


Closing operation (2): White - black After closing, the micro switch (SLS) functions and stops the motor.


3 port valve


Flow path A-C (1): White - red After flow path A-C operates, the micro switch (OLS) functions and stops the motor.

Flow path B-C (2): White - black After flow path B-C operates, the micro switch (SLS) functions and stops the motor.

MX&1D/MXB1DF/MSB1D/MSB1DF (with relay) wiring diagram







2 port valve Opening operation 20 mA


3 port valve Flow path A-C 20 mA Flow path B-C 0 (4) mA

Closing operation 0 (4) mA

Opening operation SW: ON (black - white, red) After opening, the micro switch (OLS) functions and stops the motor. Closing operation | SW: OFF (black - white) After closing, the micro switch (SLS) functions and stops the motor. 3 port valve SW: ON (black - white, red) After flow path A-C operates, the micro switch (OLS) functions and stops the motor. Flow path B-C SW: OFF (black - white) After flow path B-C operates, the micro switch (SLS) functions and stops the motor

MX&C (motor driven proportional control ball valve) wiring diagram

ANYBO NI (-:--

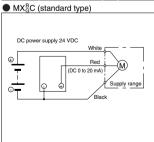


-		White	– .		 :
Power	(1) Oper	Red :	OLS	± (M)	╛┆
supply	(2) Clos	Black	~		į
	~_	Yellow	SLS	Potentiomete	ır İ
	ection _	Green Brown		⇒ Supply	range I
resi	stance				· - <u>~</u> '




2 port valve						
Opening operation	(1): Brown - green	Detection resistance 2.4 to 3.2 kΩ				
Closing operation	(2): Brown - green	Detection resistance 0.1 to 0.9 k Ω				

3 port valve						
Flow path A-C	(1): Brown - green	Detection resistance 2.4 to 3.2 kΩ				
Flow path B-C	(2): Brown - green	Detection resistance 0.1 to 0.9 kΩ				

MH&4 wiring diagram ● MH^B4



(Flow path B-C) Cl	en Supply range
2 port valve	
Opening operation	(1): White - red
Closing operation	(2): White - black
3 port valve	
Flow path A-C	(1): White - red
Flow path B-C	(2): White - black





MXB1/MXB1F Series

Port size: Rc3/8 to Rc2



JIS symbol



Common specifications

Item				MXB1	(standard	d bore)/M	XB1F (ful	l bore)	
Working fluid			Water, hot water, air, oil (500 mm²/s or less)						
Working pressure ran	ige	MPa	0 t	o 1.0 (refer to	o working pre	ssure range	in individual s	specifications	.)
Withstanding pressure (wa	ter)	MPa				2.0			
Fluid temperatur	re	ĵ			0 to	80 (no freez	ing)		
Ambient temper	atι	ıre °C				-10 to 50			
Ambient humidit	y					95 or less			
Valve seat leakage	cm	n³/min.	((at water pr	essure 1.0 M	Pa or 0.5 MF	a (only for p	ort size Rc2))	
Mounting attitud	е		Limited	d to vertical p	osition with a	ctuator facin	g upward to I	norizontal pos	sition.
Pressurization d	lire	ction				Random			
Protection grade				IPX3 "rainproof type" (standard and option T only)					
- · · · · · · · · · · · · · · · · · · ·			MXB1-10	MXB1-15	MXB1-20	MXB1-25	MXB1-32	MXB1-40	MXB1-50
Electric specifica	auc	ns	MXB1	F-15	MXB1	IF-20	MXB1F-25	MXB1F-32	MXB1F-40
Rated voltage		Note 1		100 VAC (50/60 Hz), 200 VAC (50/60 Hz), 12 VDC, 24 VDC					
Apparent power	ging -	100 VAC		4.9/5.9 (5	50/60 Hz)		13/15 (50/60 Hz)		
VA	오	200 VAC		5.4/6.2 (5	50/60 Hz)		13	3/15 (50/60 H	z)
	rting	100 VAC		4.9/5.9 (5	50/60 Hz)		13/15 (50/60 Hz)		
i.	Star	200 VAC	5.4/6.2 (50/60 Hz)				13/15 (50/60 Hz)		
Average ampere	e [12 VDC	1.1			1.5			
A Note	2	24 VDC	0.7			1.0			
Peak ampere		12 VDC		1.8 o	r less			3 or less	
A Note	2	24 VDC	1.2 or less				2 or less		
Power consumptio	n	AC		7	7			15	
١.	N	12 VDC		1	3			18	
		24 VDC		1	7			24	

MXB1 (standard bore) individual specifications

Item		MXB1-10 Note 3	MXB1-15	MXB1-20	MXB1-25	MXB1-32	MXB1-40	MXB1-50
Port size		Rc3/8	Rc1/2	Rc3/4	Rc1	Rc1 1/4	Rc1 1/2	Rc2
Orifice	mm	10	10	15	20	25	32	40
Cv flow factor		10	10 6 16 29				98	125
Working pressure range	е МРа		0 to 1.0			0 to		
Operation time sec	AC		10/8 (50/60 Hz)			13/11 (50/60 Hz)		
	DC		8	3		10.5		
Cycle rate	AC		2 cycles/n	nin. or less		1 cycle/min. or less		
Note 4	DC	1 cycle/min. or less			1 cy	cle/2 min. or	less	
Weight kg Bronze	body	1.2	1.2	1.4	1.5	2.5	3.0	3.7
Stainless	steel body	1.2	1.2	1.4	1.5	2.6	3.1	3.8

MXB1F (full bore) individual specifications

Item		MXB1F-15	MXB1F-15 MXB1F-20 MXB1F-25 MXB1F-32 I				
Port size		Rc1/2	Rc3/4	Rc1	Rc1 1/4	Rc1 1/2	
Orifice	mm	15	20	25	32	40	
Cv flow factor		23	51	66	114	176	
Working pressure range	MPa		0 to 0.5				
Operation time sec	AC	10/8 (50)/60 Hz)	13/11 (50/60 Hz)			
	DC	8	3	10.5			
Cycle rate	AC	2 cycles/m	nin. or less	1 cycle/min. or less			
Note 4	DC	1 cycle/m	in. or less	1 cycle/2 min. or less			
Weight	kg	1.4	1.5	2.5	3.0	3.7	


Note 1: Allowable voltage range must be within ±10% of the rated voltage. Note 2: Each ampere is the value at the rated voltage.

Note 3: MXB1-10 is full bore.

Note 4: Cycle rate must be within the specifications.

Note 5: Consult with CKD about other than above specifications.

How to order

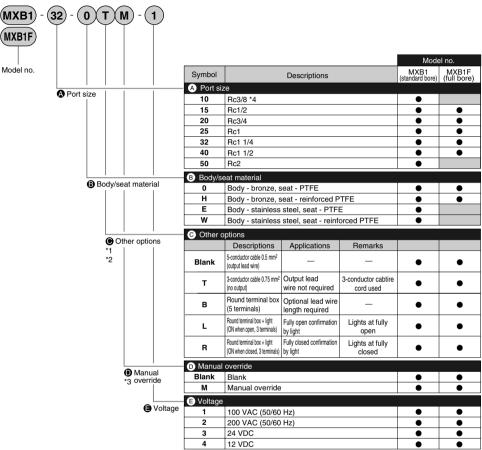

^{*1;} When selecting both no output (T) and a round terminal box (B) as options, designate as TB, A 3-terminal round terminal box will be provided.

<Example of model number>

MXB1F-32-0TM-1

Model no.: MXB1F (full bore)

: Rc1 1/4 A Port size

Body/seat material : Body - bronze, seat - PTFE Other options : 3-conductor cable (no output)

 Manual override : Selected

Voltage : 100 VAC (50/60 Hz) HNB/G

HSR/G

FAB/G FGR/G

FWR/G

FHB FLB

AB

AG AP/ AD APK/

ADK For dry air Explosion proof HVB/ HVL CAR/

SVR

NP/NAP/ NVP CHB/G MXB/G Other G.P. systems PD/FAD/

PJ CVE/ CVSE CPE/ CPD

Medical analysis

Custom order

Motor driven 2 port ball valve

^{*2:} Combinations of LR, TL, TR, BL and BR aren't available for @.


^{*3:} When the manual override (M) is selected, available port sizes are 32, 40 and 50 for MXB1. For MXB1F, available port sizes are 25, 32 and 40. For the other port sizes, the manual override is equipped as standard.

^{*4:} When port size is 10, the valve is full bore but the model is MXB1.

MXB1/MXB1F Series

Internal structure and parts list

MXB1/MXB1F

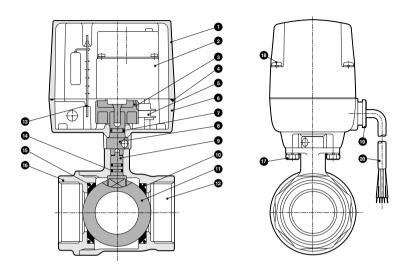

No.	Parts name	Material		No.	Parts name	Material	
1	Bonnet	ADC12	Aluminum die casting	11	Valve ball	C3771 (SUS304)	Brass *2 (stainless steel)
2	Geared motor	-	=	12	Body	CAC408, CAC407 (SCS13)	Bronze casting (stainless steel casting)
3	Cam	PA	Polyamide resin	13	P plate assembly	PF	Phenol resin
4	Gasket	NBR	Nitrile rubber	14	O ring *1	FKM, NBR	Fluoro rubber, nitrile rubber
5	Micro switch	-	-	15	O ring	FKM	Fluoro rubber
6	Adaptor	ZDC2	Zinc alloy die-casting	16	Сар	CAC408, CAC407 (SCS13)	Bronze casting (stainless steel casting)
7	O ring	NBR	Nitrile rubber	17	Hexagon head bolt	SWRM	Carbon steel wire for cold forging
8	Intermediate bush	SUS303	Stainless steel	18	Cross headed pan head machine screw	SWRM	Carbon steel wire for cold forging
9	Shaft	SUS303 (SUS304)	Stainless steel (stainless steel)	19	Bushing	PF	Phenol resin
10	Ball seat	PTFE	Tetrafluoroethylene resin	20	Cabtire cord	0.5 mm ² , 5-conductor	-

Materials shown in () are for stainless steel body.


^{1:} The upper O ring is NBR, and the lower is FKM. For stainless steel body, FKM is used for both upper and lower O rings.

2: The valve ball is made of hard chrome plated brass.

Dimensions

■ MXB1-10/15/20/25-

● MXB1F-15/20-*

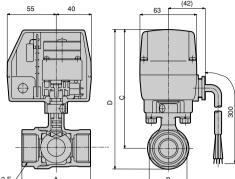

(Page 612)


Cabtire cord length 300 mm


Model no.	Α	В	С	D	Е
MXB1-10-*	50 (56)	24 (28)	124.5	139.5 (140.5)	Rc3/8
MXB1-15-*	56	28	124.5	139.5 (140.5)	Rc1/2
MXB1-20-*	65	34	130.5	150 (151)	Rc3/4
MXB1-25-*	76	41	133.5	156.5 (157.5)	Rc1
MXB1F-15-*	65	28	130.5	150	Rc1/2
MXB1F-20-*	71	34	133.5	156.5	Rc3/4

Note 1: Values shown in () are for stainless steel body.

MXB1-32/40/50-*

● MXB1F-25/32/40-*



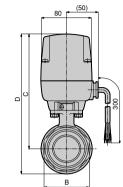


Cabtire cord length 300 mm

Model no.	Α	В	С	D	Е
MXB1-32-*	84	50	166	193.5 (195.5)	Rc1 1/4
MXB1-40-*	94	57	172	205.5 (207.5)	Rc1 1/2
MXB1-50-*	108	70	181	220.5 (221.5)	Rc2
MXB1F-25-*	84	41	166	193.5	Rc1
MXB1F-32-*	95	50	172	205.5	Rc1 1/4
MXB1F-40-*	107	57	181	220.5	Rc1 1/2


Note 1: For valves with manual override "M", the MSB1 Series yoke is inserted between the valve and actuator, making dimensions C and D 22 mm longer. Note 2: Values shown in () are for stainless steel body.

CAD (Page 612) Optional dimensions

 Round terminal box MXB1/MXB1F-Port size -* B

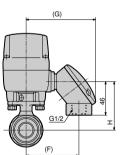

	•
1 1	
8	
"	
_ +	
I	
+	

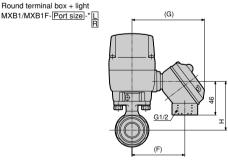

Port	size	F	G	н	
MXB1	MXB1F		G	П	
10	-	74	96	58.5	
15	-	74	96	58.5	
20	15	74	96	64.5	
25	20	74	96	67.5	
32	25	82	104	77.5 (Note 1)	
40	32	82	104	83.5 (Note 1)	
50	40	82	104	92.5 (Note 1)	

Port	size	F	G	Н	
MXB1	MXB1F	Г	G		
10	-	74	101	58.5	
15	-	74	101	58.5	
20	15	74	101	64.5	
25	20	74	101	67.5	
32	25	82	109	77.5 (Note 1)	
40	32	82	109	83.5 (Note 1)	
50	40	82	109	92.5 (Note 1)	

Note 1: For valves with manual override "M", the MSB1 Series yoke is inserted between the valve and actuator, making dimensions 22 mm longer.

HNB/G

USB/G FAB/G

FGB/G FVB FWB/G

FHB FLB AB

> AG AP/ AD APK/

ADK For dry air Explosion proof HVB/ HVL SAB/

SVB NP/NAP/ NVP

CHB/G

MXB/G Other G.P. systems PD/FAD/ PJ CVE/ CVSE CPE/

CPD Medical analysis Custom order

Motor driven 2 port ball valve



Electronic Catalog file list

Motor driven 2, 3 port ball valve MXB/MXG

Standard type MXB/MXG

Electronic Catalog file list is applied to "CAD DATA 2006".

Modeline		DXF	MICRO CADAM
Model no.	Folder name	Filename	Filename (GROUP: CAD. USER: STDLIB)
● 2 port valve MXB: Page 561			
MXB1-10	MXB_MXG	mxb1_10	CKD-MXB1-10
MXB1-15		mxb1_15	CKD-MXB1-15
MXB1-20		mxb1_20	CKD-MXB1-20
MXB1-25		mxb1_25	CKD-MXB1-25
MXB1-32		mxb1_32	CKD-MXB1-32
MXB1-40		mxb1_40	CKD-MXB1-40
MXB1-50		mxb1_50	CKD-MXB1-50
MXB1-10-E/W/N		_mxb1_10_e_w_n	CKD-MXB1-10-E/W/N
MXB1-15-E/W/N		mxb1_15_e_w_n	CKD-MXB1-15-E/W/N
MXB1-20-E/W/N		mxb1_20_e_w_n	CKD-MXB1-20-E/W/N
MXB1-25-E/W/N		mxb1_25_e_w_n	CKD-MXB1-25-E/W/N
MXB1-32-E/W/N		mxb1_32_e_w_n	CKD-MXB1-32-E/W/N
MXB1-40-E/W/N		mxb1_40_e_w_n	CKD-MXB1-40-E/W/N
MXB1-50-E/W/N		mxb1_50_e_w_n	CKD-MXB1-50-E/W/N
MXB1F-15		mxb1f_15	CKD-MXB1F-15
MXB1F-20		mxb1f_20	CKD-MXB1F-20
MXB1F-25		mxb1f_25	CKD-MXB1F-25
MXB1F-32		mxb1f_32	CKD-MXB1F-32
MXB1F-40		mxb1f_40	CKD-MXB1F-40
Round terminal box, round terminal box + light		mxb_mxg_b_l_r	CKD-MXB/MXG-B/L/R
3 port valve MXG: Page 565			
MXG1-15	MXB_MXG	mxg1_15	CKD-MXG1-15
MXG1-20		mxg1_20	CKD-MXG1-20
MXG1-25		mxg1_25	CKD-MXG1-25
MXG1-32		mxg1_32	CKD-MXG1-32
MXG1-40		mxg1_40	CKD-MXG1-40
MXG1-50		mxg1_50	CKD-MXG1-50
MXG1-15-E/W/N		mxg1_15_e_w_n	CKD-MXG1-15-E/W/N
MXG1-20-E/W/N		mxg1_20_e_w_n	CKD-MXG1-20-E/W/N
MXG1-25-E/W/N		mxg1_25_e_w_n	CKD-MXG1-25-E/W/N
MXG1-32-E/W/N		mxg1_32_e_w_n	CKD-MXG1-32-E/W/N
MXG1-40-E/W/N		mxg1_40_e_w_n	CKD-MXG1-40-E/W/N
MXG1-50-E/W/N]	mxg1_50_e_w_n	CKD-MXG1-50-E/W/N
Round terminal box, round terminal box + light		mxb_mxg_b_l_r	CKD-MXB/MXG-B/L/R

High corrosion resistant MXB1-C (page 569)

Model no.		DXF	MICRO CADAM
	Folder name	Filename	Filename (GROUP: CAD, USER: STDLIB)
MXB1-15-C	MXB1_C	mxb1_15_c	CKD-MXB1-15-C
MXB1-20-C]	mxb1_20_c	CKD-MXB1-20-C
MXB1-25-C]	mxb1_25_c	CKD-MXB1-25-C
MXB1-32-C		mxb1_32_c	CKD-MXB1-32-C
MXB1-40-C		mxb1_40_c	CKD-MXB1-40-C
MXB1-50-C		mxb1_50_c	CKD-MXB1-50-C



Electronic Catalog file list

MSB for steam (page 593)

Electronic Catalog file list is applied to "CAD DATA 2006".

	DXF	MICRO CADAM
Folder name	Filename	Filename (GROUP: CAD, USER: STDLIB)
MSB	msb1_10	CKD-MSB1-10
	msb1_15	CKD-MSB1-15
	msb1_20	CKD-MSB1-20
	msb1_25	CKD-MSB1-25
	msb1_32	CKD-MSB1-32
	msb1_40	CKD-MSB1-40
	msb1_50	CKD-MSB1-50
	msb1f_15	CKD-MSB1F-15
	msb1f_20	CKD-MSB1F-20
	msb1f_25	CKD-MSB1F-25
	msb1f_32	CKD-MSB1F-32
	msb1f_40	CKD-MSB1F-40
		Folder name MSB msb1_10 msb1_15 msb1_20 msb1_25 msb1_32 msb1_40 msb1_50 msb1f_15 msb1f_120 msb1f_25 msb1f_20 msb1f_23

Proportional control MXBC/MXGC (page 601)

Model no.	DXF		MICRO CADAM
	Folder name	Filename	Filename (GROUP: CAD, USER: STDLIB)
MXBC-10	MXBCMXGC	mxbc_10	CKD-MXBC-10
MXBC-15		mxbc_15	CKD-MXBC-15
MXBC-20		mxbc_20	CKD-MXBC-20
MXBC-25		mxbc_25	CKD-MXBC-25
MXGC-15		mxgc_15	CKD-MXGC-15
MXGC-20		mxgc_20	CKD-MXGC-20
MXGC-25		mxgc_25	CKD-MXGC-25

Miniature type MHB4/MHG4 (pages 606 to 607)

Model no.	DXF		MICRO CADAM
Model IIO.	Folder name	Filename	Filename (GROUP: CAD, USER: STDLIB)
MHB4-10	MHB4MHG4	mhb4_10	CKD-MHB4-10
MHB4-15		mhb4_15	CKD-MHB4-15
MHB4-20		mhb4_20	CKD-MHB4-20
MHG4-10		mhg4_10	CKD-MHG4-10
MHG4-15		mhg4_15	CKD-MHG4-15
MHG4-20		mhg4_20	CKD-MHG4-20

Motor driven ball valve temperature control system MHBP (page 610)

Model no.		DXF	MICRO CADAM
Model No.	Folder name	Filename	Filename (GROUP: CAD, USER: STDLIB)
MHBP-15	MHBP	mhbp_15	CKD-MHBP-15
MHBP-20		mhbp_20	CKD-MHBP-20
MHBP-25		mhbp_25	CKD-MHBP-25

FLB

AD APK/ ADK For dry air Explosion proof HVB/ HVL

SAB/ SVB NP/NAP/ NVP

CHB/G

MXB/G Other G.P. PD/FAD/ PJ

CVE/ CVSE CPE/ CPD Medical

analysis Custom order